

SPC2□□□-MD Serial to Ethernet Communication Module




扫码了解详情

User Manual

I. Precautions

- Do not operate this product beyond its design limits under any circumstances.
- The power supply for this product is 24V DC. Strictly prohibit the use of 220V AC power.
- This product should be installed in a safe location. The shell's maximum withstand temperature is +85°C.
- When used in environments with strong magnetic interference, shielded cable is recommended for signal lines.
- Strictly prohibit unauthorized disassembly, modification, or repair of this product.
- Pay attention to the wiring method of this product to ensure correct Wiring and avoid damaging the product.
- Read this manual carefully before installation and use. If you have any questions, please contact our technical support personnel or refer to relevant technical guidance videos.
- Our company is not responsible for damage to components other than this product during use.
- Please download the latest electronic version of the documentation. The content of this manual is for reference only. We continuously improve the user experience, and technical parameters are subject to change without notice.

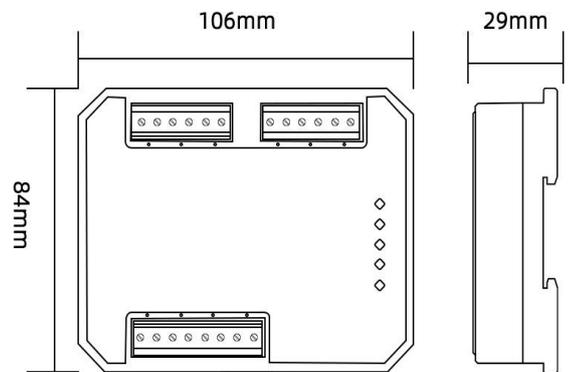

II. Product Dimensions

- Product dimensions: **106mm (L) X 84mm (W) X 29mm (H)**
- Industrial-grade flame-retardant plastic shell, standard DIN35 rail mounting.

III. Operating Environment

- Do not expose this product to excessively high or low temperatures.
- The surrounding environment must be free from strong vibration, impact, and electromagnetic interference such as large current and sparks.
- The operating environment must not contain harmful substances that cause severe corrosion to metal or plastic components. Do not use or store the product in harsh environments, otherwise it will affect the electrical performance of the product.
- Operating Temperature: -40°C ~ +80°C Relative Humidity: 10% ~ 90%RH (non-condensing)

IV. After-Sales Service

We are committed to providing you with comprehensive after-sales service and warranty policy. The product warranty period is three years. During the warranty period, if the product fails due to non-human factors, we will provide free repair or replacement service. Damage caused by violation of operating regulations and requirements will require payment of parts cost and repair fee. After the warranty period expires, we continue to provide technical support and assistance. During this period, replacement parts are provided at cost price.

V. Application Fields



Automation Equipment



Self Service Banking System



Remote Monitoring



PLC control

I. Product Introduction

The SPC2□□□-MD series modules are multifunctional, enables the conversion of multi-port serial data to Ethernet data. They feature various MODBUS gateway modes, as well as TCP Client, TCP Server, UDP Client, UDP Server, MQTT, and HTTP IoT gateway modes, meeting the networking needs of various serial devices and PLCs. They support serial port baud rates up to 115200bps and are easily configured via host software.

This series of modules not only provides conventional serial port server functionality, converting standard RS232 serial port signals into TCP/IP signals, enabling bidirectional transparent data transmission between RS232 serial ports and TCP/IP network interfaces, but also offers MODBUS gateway functionality, converting between MODBUS TCP and MODBUS RTU protocols. This allows serial devices to connect to Ethernet for data communication, significantly reducing serial device wiring and expanding communication modes and distances.

This product requires independent power supply and adopts DIN35mm standard rail installation. It is easy to install on site and flexible to use, and can cope with various on-site applications.

· Features

- Employs a 32-bit industrial-grade, high-performance microprocessor with precision-engineered design;
- Isolated input, output, and power supply with unique anti-interference measures for stable and reliable performance;
- Supports 10/100M full-duplex/half-duplex auto-sensing Ethernet interface, compatible with 802.3 protocols;
- Supports bidirectional transparent transmission of serial port data and network data;
- Configuration using a host computer network configuration tool;
- Supports 4 simultaneous server connections, supports 8 dynamic client allocations, and supports 5 clients per server;
- The serial port uses RS232 communication, supports up to 4 RS232 communication interfaces, and features a serial port buffer clearing function;
- The serial port supports baud rates from 1200 to 115200 bps, multiple parity modes, 5 to 8 data bits, and 1 or 2 stop bits;
- Supports a serial port buffer clearing function;
- Supports DNS domain name resolution, DHCP for dynamic IP, subnet mask, default gateway, and DNS Server address;
- Supports TCP, UDP, MQTT, and HTTP client modes, as well as TCP and UDP server modes;
- Supports MODBUS gateway, enabling active reporting from RTU devices;
- Supports conversion between MODBUS TCP and MODBUS RTU protocols, and also supports multi-host mode with one-question-one-answer;
- Supports active reporting of MODBUS data to TCP transparent transmission servers, MQTT servers, etc.;
- Supports HTTP client mode, using the HTTP/1.1 protocol;
- Configurable indicator lights to indicate connection disconnection, connection establishment, and data transmission status.
- Industrial-grade flame-retardant plastic enclosure, designed for standard DIN 35 rail installation.



II. Product Specifications

· Technical Parameters

| Basic Parameters | |
|---------------------------------|--|
| Power Supply | DC12~36V(DC24V recommended) |
| Operating Current | Standby≤50mA, Peak ≤80mA @DC24V |
| Power Isolation | 3000VDC |
| Configuration | Sine Power Equipment Network Configuration Tool |
| Ethernet Interface | |
| Ethernet Interface | 1 |
| Interface Standard | RJ45 |
| Network Port Speed | 10/100M |
| Socket Connection | Supports up to 8 client connections |
| Protocol Type | TCP Client, TCP Server, UDP Client, UDP Server, MQTT Client, HTTP Client |
| Network Protocols | IP, TCP/UDP, IPv4, ICMP, APR, DHCP, DNS, MQTT, HTTP |
| IP Address | 192.168.3.200 (User-Definable) |
| Domain Name Resolution | Supported |
| Subnet Mask | 255.255.255.0 (User-Definable) |
| DNS Domain Name Resolution | 114.114.114.114 (User-Definable) |
| Local Port Default channels | 1-8 correspond to ports 8001-8008 |
| Gateway | 192.168.3.1 (user-defined) |
| Packing mechanism | 8 x 512 bytes |
| Network port isolation | 1500VDC |
| Serial communication parameters | |
| Communication level | RS232 asynchronous full-duplex |
| Number of channels: | 4 |
| Communication buffer | 256 bytes |
| Baud rate | 1200 ~ 115200bps |
| Data bits | 5-8 bits |
| Parity | None, odd, even |
| Stop bits | 1, 2 |
| Environmental Conditions | |
| Operating Temperature | -40°C~+80°C |
| Storage Temperature | -40°C~+85°C |
| Relative Humidity | 10%~90%RH(non-condensing) |
| Atmospheric Pressure | 80kPa~106kPa |


· Terminal Description

| Terminal Mark | Function Description |
|---------------|--|
| VIN | Power supply positive terminal, DC12-36V input |
| OV | Power supply negative terminal |
| NC | No connection |
| GND | Channel 1 RS-232 Ground |
| TX1+ | Channel 1 RS-485 Signal Transmit |
| RX1- | Channel 1 RS-232 Signal Receive |
| GND | Channel 2 RS-232 Ground |
| TX2+ | Channel 2 RS-485 Signal Transmit |
| RX2- | Channel 2 RS-232 Signal Receive |
| GND | Channel 3 RS-232 Ground |
| TX3+ | Channel 3 RS-485 Signal Transmit |
| RX3- | Channel 3 RS-232 Signal Receive |
| GND | Channel 4 RS-232 Ground |
| TX4+ | Channel 4 RS-485 Signal Transmit |
| RX4- | Channel 4 RS-232 Signal Receive |
| ETH | Ethernet port |

· Indicator Description


| Indicator Mark | Function Description |
|----------------|---|
| PWR | Power indicator |
| SYS | System status indicator, flashes when normal |
| TXD | RS232 communication indicator, flashes when sending data |
| RXD | RS232 communication indicator, flashes when receiving data |
| LINK | Network port connection is successful, the indicator is solid |

· Wiring and indication

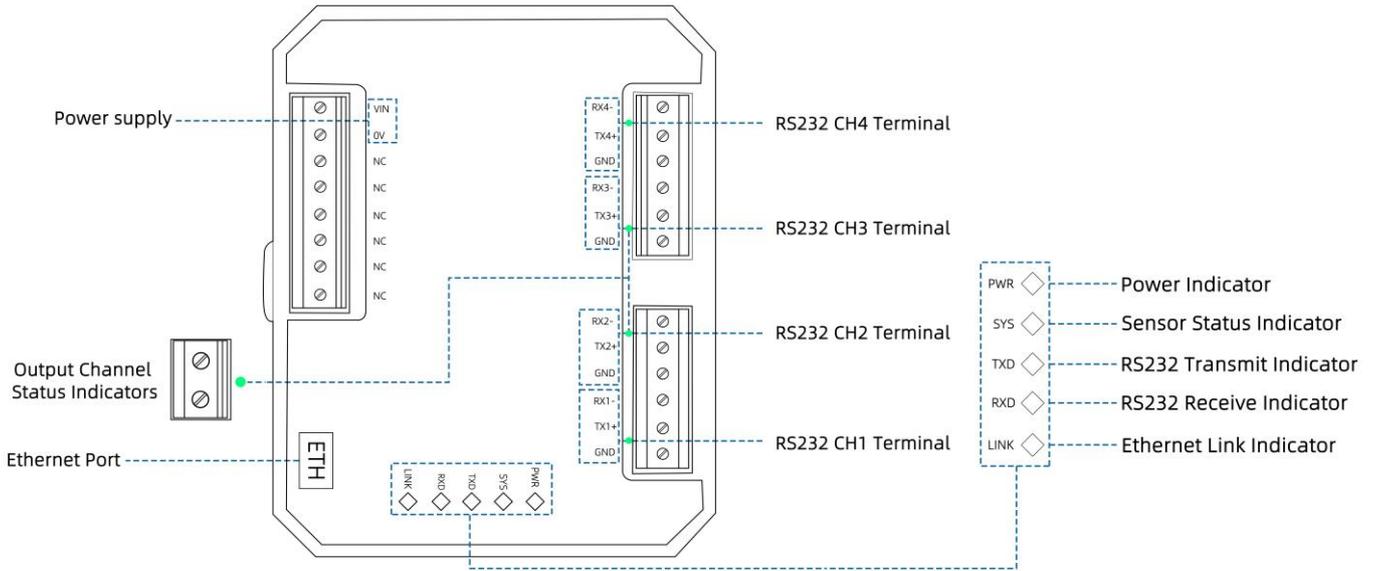

· Installation Instructions

This module is designed for mounting on a 35mm DIN rail. The rail must comply with the mounting dimensions for TH35-7.5 rails specified in the national standard GB/T19334-2003. The module can be easily installed and removed from the rail, ensuring a stable and secure installation. This module also supports screw mounting for installation without a DIN rail.

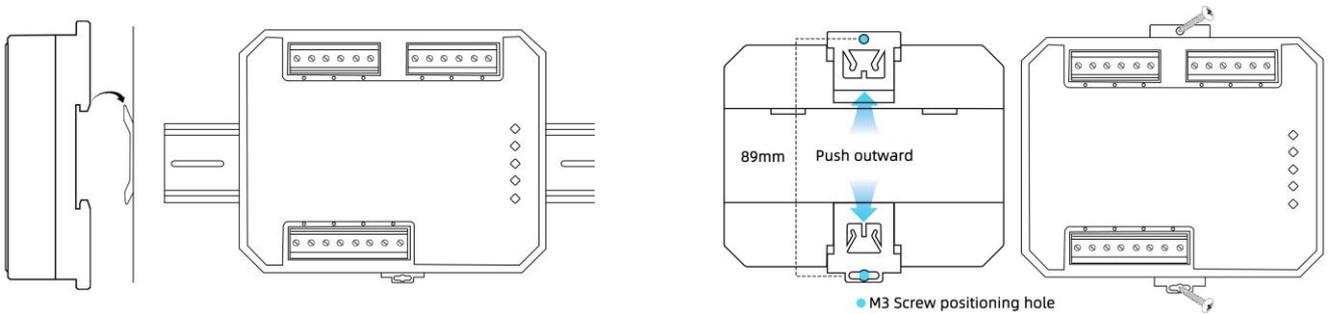

- Installation method of guide rail -

- Screw installation method -

· Product Naming Rules

Take the SPC2040-MD18L as an example: 4-channel RS232 serial-to-Ethernet communication module, Ethernet speed 10/100Mbps, M-shaped form factor, module powered by DC12-36V.

| SPC | 2 | 04 | 0 | M | D | 1 | 8 | L |
|-------------------------------|---|---------------------|---------------|--|--|---|--|---|
| Product Type | Contact Type | Conversion Channels | Serial Number | Product Form Factor | Comm Speed | Isolation Level | Output Type | Power Supply |
| Comm signal conversion module | 1 USB 2 ETH 3 Bluetooth 4 WIFI 5 CAN 6 Profinet 7 LoRa 8 Serial Comm 9 Other Comm | 1-32 | 0-9 | N Form Factor K Form Factor M Form Factor W Form Factor F Form Factor R Form Factor Y Form Factor Q Form Factor | A Speed 200Kbps B High Speed 1Mbps C Ethernet 10Mbps D Ethernet 100Mbps E Other Speeds | 0 No Isolation 1 1500V 2 3000V 9 Other Classes | 0 RS232 1 RS485 2 Ethernet 3 Bluetooth 4 WiFi 5 CAN 6 Profinet 7 LoRa 9 Mixed output | L DC12-36V H AC220V C +12V D +24V U USB Power |

III. Communication Function Introduction

· RS232 Parameter and Channel Correspondence

Baud Rate: 1200, 2400, 4800, 9600, 14400, 19200, 38400, 57600, 76800, 115200 bps

Data Bits: 5, 6, 7, 8

Parity: None, Odd, Even

Hardware Flow Control: Not Supported

| Channel Default | Protocol Mode | Default Port |
|-----------------|---------------|--------------|
| Channel 1 | TCP Server | 8001 |
| Channel 2 | TCP Server | 8002 |
| Channel 3 | TCP Server | 8003 |
| Channel 4 | TCP Server | 8004 |
| Channel 5 | TCP Server | 8005 |
| Channel 6 | TCP Server | 8006 |
| Channel 7 | TCP Server | 8007 |
| Channel 8 | TCP Server | 8008 |

Gateway Default Parameters

| Item | Default Parameters |
|-------------------------|--------------------|
| IP Address | 192.168.3.200 |
| Subnet Mask | 255.255.255.0 |
| Gateway | 192.168.3.1 |
| Channel 1 Protocol Type | TCP Server |
| Channel 1 Local Port | 8001 |

· Device Network Parameters

1. Device IP

- **STATIC (Static IP)**, Users can define and configure the IP address, subnet mask, default gateway, and DNS server.
- **DHCP (Dynamic IP Acquisition)**, After logging into the server, the device automatically obtains the server-assigned IP address, subnet mask, gateway address, and DNS server address parameters, and configures them for use.

2. DNS (Domain Name Resolution)

When a user enters a domain name, the device automatically queries the DNS server, which retrieves the corresponding IP address from the database. In static IP mode, users can customize the DNS server used to resolve private DNS server data. In dynamic IP mode, the device automatically uses the DNS server configured on the router. Users only need to modify the router's DNS server; no configuration is required.


3. Network Reconnection Period

When the device detects a disconnection from the server, it periodically initiates a reconnection request. Therefore, the "Reconnection Period" does not affect the normal connection establishment time. Users can customize the request period; the default is 5 seconds.

· Module Configuration and Operating Mode Description


1. TCP Client

- TCP Client is a TCP client. When operating, the module will actively initiate a connection request to the server and establish a connection, enabling the exchange of serial port data with the server.
- Using the client requires accurate configuration of the target IP address/domain name and target port.
- Eight channels can independently open eight TCP clients. (Specific number depends on the number of serial ports.)

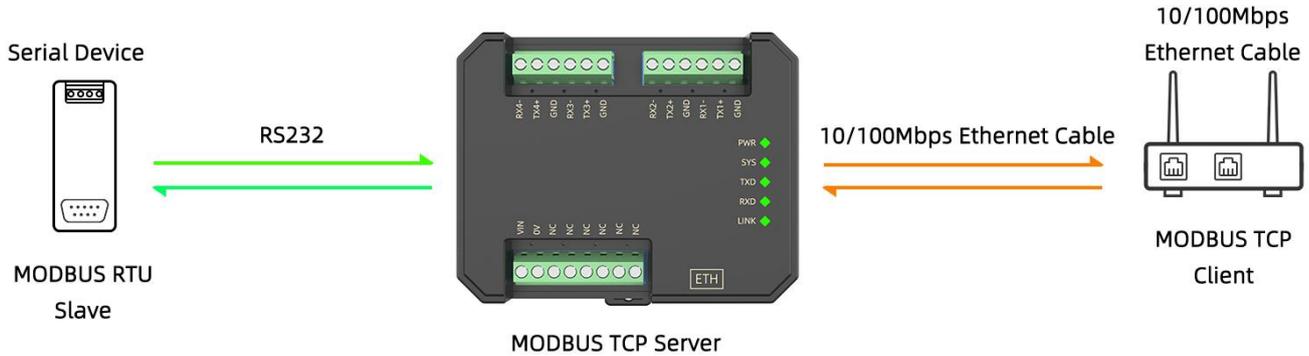

2. TCP Server

- A TCP server is a TCP server. In TCP server mode, the device listens on the local port, accepts client connection requests, and establishes connections for data communication. When the Modbus gateway function is disabled, the device sends data received on the serial port to all client devices connected to the device. The network parameters that require configuration for the module include: operating mode, module IP, subnet mask, default gateway, and module port.
- In server mode, each link can connect to up to five clients. If the number of connected clients exceeds this limit, the device will reject the connection.

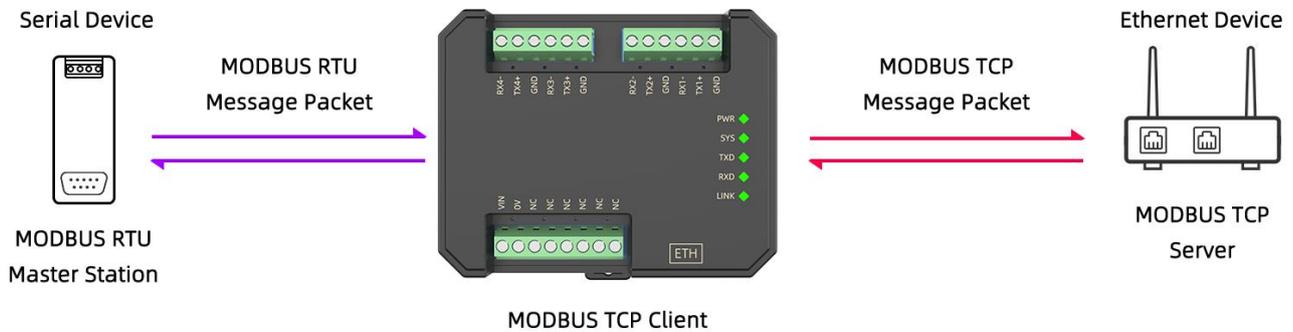

3. UDP Client

- UDP Client is a connectionless transmission protocol that provides simple, transaction-oriented, unreliable information transmission services. There's no connection establishment or disconnection involved; data can be sent to a specific destination simply by configuring the destination IP and port. It's typically used in data transmission scenarios where packet loss rates are minimal, data packets are small, transmission frequency is high, and data must be sent to a specific IP address.
- The module will first transmit data destined for the local port to the module's serial port. Data destined for the module's serial port will also be transmitted via UDP to the specified destination IP and port. In this mode, the module requires configuration of the following network parameters: operating mode, module IP, subnet mask, default gateway, module port, destination IP, and destination port.
- In UDP Client mode, the device will only communicate with the configured remote UDP device (destination IP and port).
- In this mode, the destination address is set to 255.255.255.255. Sent data will be broadcast to the entire network segment, but the sending and receiving devices must use the same port. The devices can also receive broadcast data.

Note: In UDP mode, the data sent from the network to the device should be less than 1024 bytes per packet, otherwise data loss will occur.


4. UDP Server

- UDP Server means that the device does not verify the source IP address of data when communicating using the UDP protocol. After receiving each UDP packet, it saves the packet's source IP address and source port and sets them as the destination IP and port. Therefore, data sent by the device is only sent to the source IP address and port of the last device receiving the data.
- The module receives all data sent to the local IP and port and forwards it to the serial port. Data sent to the module's serial port is also forwarded via UDP to the UDP IP and port of the communicating device. In this mode, the network parameters that require configuration include: operating mode, module IP, subnet mask, default gateway, and module port.
- This mode is typically used in scenarios where multiple network devices communicate with the device frequently, making TCP Server insufficient.
- Using UDP Server requires the remote UDP device to send data first; otherwise, data transmission will fail.

Note: In UDP mode, data sent from the network to the device should be less than 1024 bytes per packet, otherwise data loss will occur.

5. HTTP Client

- This mode enables automatic HTTP packet assembly and provides a POST method. Customers can configure URL parameters, which the device then assembles and sends, enabling fast communication between serial port data and the HTTP server. URLs support up to 96 bytes of data, and each of the eight channels can independently enable HTTP client mode without interfering with each other.
- HTTP request data must be less than the packet length (1024 bytes). Otherwise, the device will split the request data into multiple packets, resulting in request errors.

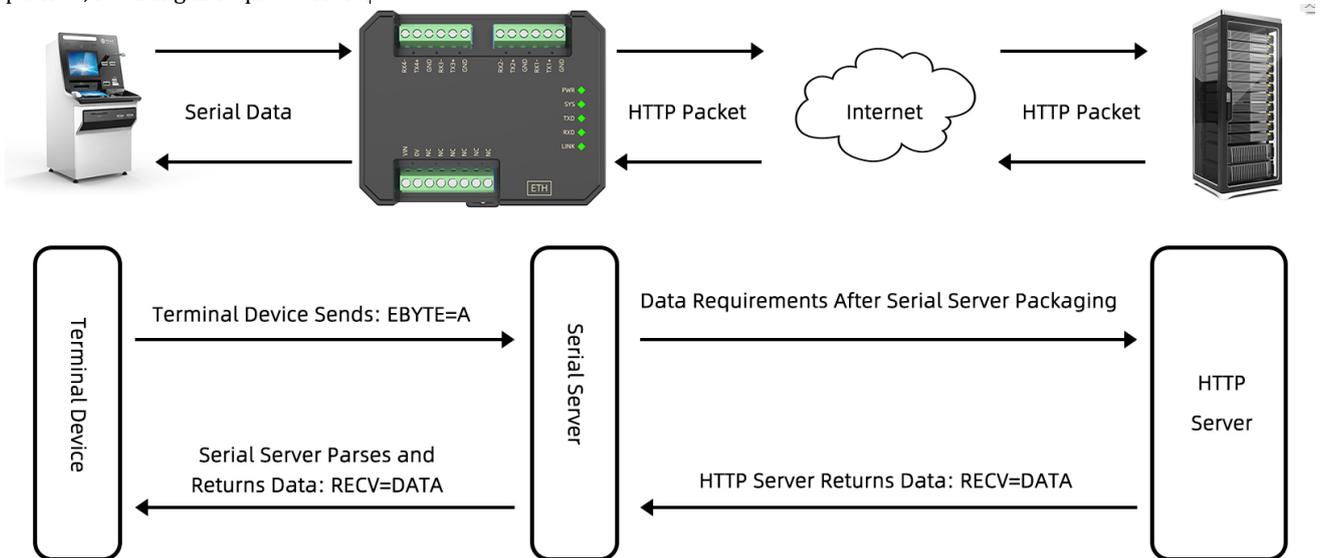

Use the HTTP function configuration reference, as shown in the following figure:




POST Description:

For packets configured as POST requests, the device automatically calculates the length of any header that does not require a specific data length configuration and sends it as a packet. Other header data must be manually configured. A maximum of 128 bytes of data is supported.

6. MQTT Client

Supports quick access to standard MQTT 3.1.1 protocol servers (Baidu Cloud, Huawei Cloud, user-hosted servers, and others) and Alibaba Cloud servers. It supports QoS level configuration (QoS 0 and QoS 1) and supports long text configuration for easier access to network service providers (server address, three elements, and subscription and publication addresses support up to 128 characters).

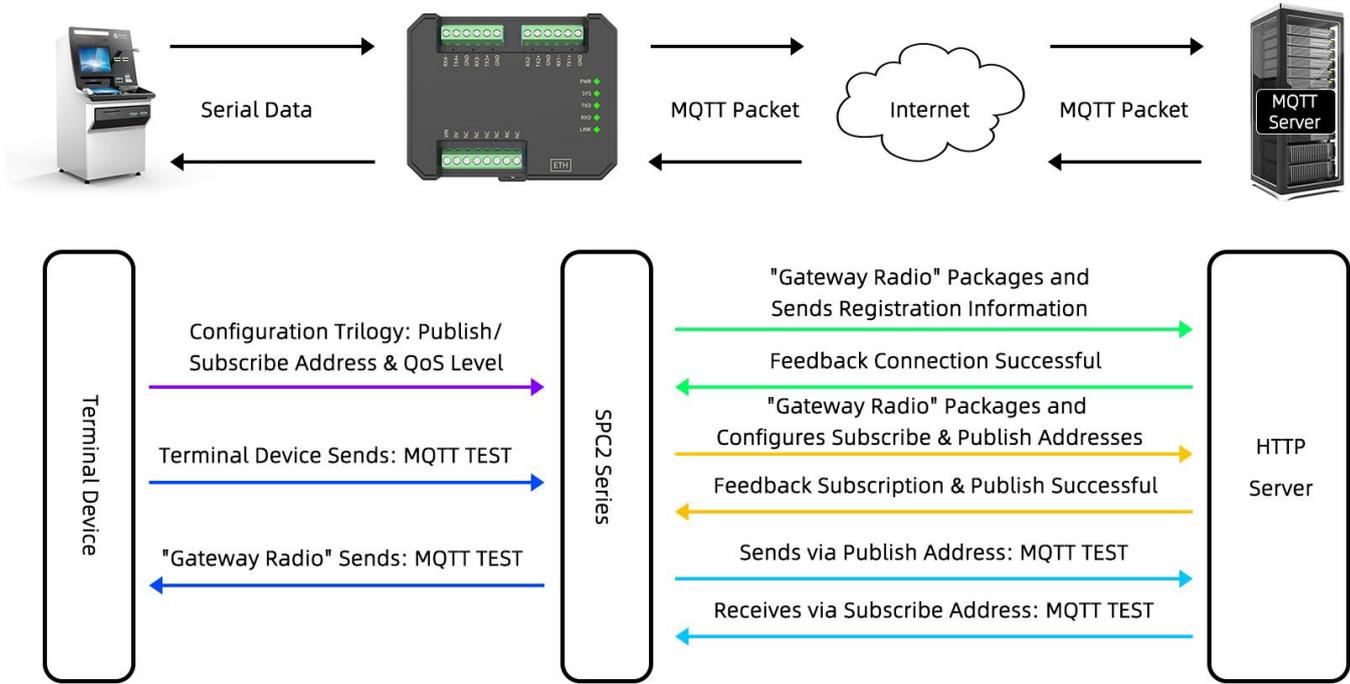

Use the MQTT function configuration reference, as shown in the following figure:

MQTT配置

| | |
|---------|----------------------------------|
| 客户ID | <input type="text"/> |
| 用户名 | <input type="text"/> |
| 密码 | <input type="text"/> |
| 订阅主题 | <input type="text"/> |
| 发布主题 | <input type="text"/> |
| 发布质量 | <input type="text" value="0"/> ▾ |
| 订阅质量 | <input type="text" value="0"/> ▾ |
| 心跳周期(秒) | <input type="text" value="30"/> |

• Channel Port

Random Port:

TCP, UDP, HTTP, and MQTT clients can configure the local port to 0 (using a random local port). Do not use a random port in server mode, as this will prevent the client from properly establishing a connection (the device is not properly listening on the port). Using a random port allows for quick re-establishment if the device unexpectedly disconnects from the server, preventing the server from rejecting the connection due to incomplete four handshake attempts. Using a random port in client mode is recommended.

Static Port:

The device uses a fixed port (factory default: 8001-8008). In TCP server mode, the device listens on the configured port, accepts client connection requests, and establishes connections for data communication. In TCP client mode, the device initiates connection requests on the fixed port.


IV. Using the Configuration Software

Use the "SinePower NetSet V1.2.exe" network configuration software to set relevant parameters.

1. Open "SinePower NetSet V1.2.exe" and click "Search Devices." The device list will display all online devices.
2. Double-click the device you have found to retrieve its parameters.
3. In the basic network parameters area on the left side of the interface, modify the device's network parameters as needed. Click "Set Network" to save the settings.
4. In the parameter settings area in the center of the interface, modify the network protocol and serial port parameters as needed. Click "Set Port" to save the settings. After completing the configuration, click "Restart Device" to reset the device. The device will restart. Wait a moment, then click "Search Devices" to find the device and read the parameters to view the device configuration results.
5. This device supports 8-channel port settings. The default interface is for channel 1. To set parameters for another channel, first read the parameters for the corresponding port number. The interface will automatically switch to the corresponding channel number, allowing you to set the parameters for the current channel number.




6. Use the transparent transmission function configuration reference and set the relevant options through the working mode position, as shown in the following figure:

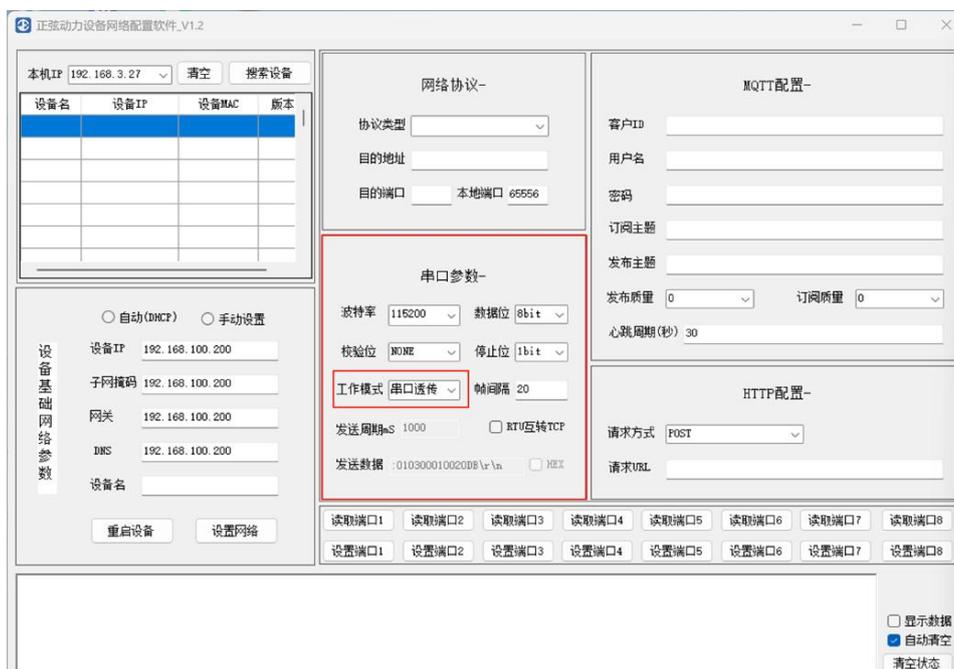

V. Introduction to the transparent transmission function

· Server transparent transmission

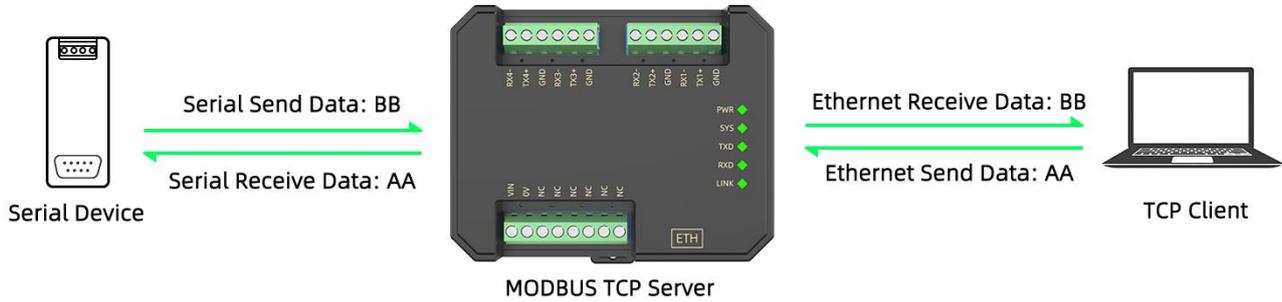


Functional Overview

Functional Overview: The module acts as a TCP server, directly converting serial port data to the Ethernet port for transmission, and vice versa.

Parameter Description

| Parameter Type | Details |
|--------------------------------------|---|
| Network Port Connection Target | TCP Client |
| Serial Port Connection Target | RS485 Serial Device |
| Channel 1 Default IP Address | 192.168.3.200 |
| Channel 1 Default Port Number | 8001 |
| Number of Connected Clients | 1 |
| Serial Port Communication Parameters | 9600, 8-bit data, no parity, 1 stop bit |

· Client transparent transmission

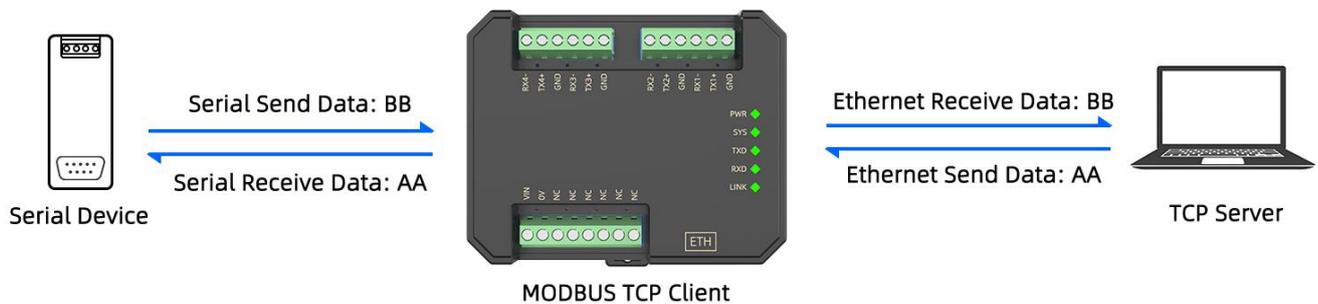

Functional Overview

The module acts as a TCP client, actively connecting to a TCP server at a specified IP and port, directly converting serial port data to the Ethernet port for transmission, and vice versa.

Parameter Description

| Parameter Type | Details |
|---|--|
| Network Port Connection Target | TCP Server |
| Network Type | LAN |
| Serial Port Connection Target | RS232 Serial Device |
| Default Remote Server IP Address and Port | 192.168.3.100 (IP) and 8001 (Port) for RS485 |
| Number of Connected Servers | 1 |
| Serial Port Communication Parameters | 9600, 8-bit data, no parity, 1 stop bit |

VI. Quick Start Guide

If you encounter any technical issues during use, please visit our video channel and find the corresponding product quick start guide to quickly verify device functionality.

• Hardware Requirements

- A laptop with an RJ45 network port;
- An SPC2 communication module;
- An Ethernet cable;
- A USB to 485 communication module (SPC1020-KA);

The required hardware is shown in the figure below:



computer



Ethernet cable



SPC2 Module



USB to RS485 module

• Software Preparation

Serial Port Debugging Assistant (SCOMM), Network Debugging Assistant (TCP/IP Debugging Assistant), Sine Power Network Configuration Tool (for configuring the host computer)



Serial Port Debugging Assistant



Network Debugging Assistant



SinPower Network Configuration Tool

• Device Testing Steps

Different channels use the same IP address but different local ports. For example, the factory-configured channel 1 corresponds to port 8001, and this is increased sequentially to channel 8, which corresponds to port 8008.

1. Connect the hardware device



- Connect the device's Ethernet port to the computer's Ethernet port using an Ethernet cable.
- Connect the device's RS485 terminal to the computer's USB port via a USB-to-485 communication module.
- Confirm that everything is working correctly before proceeding to the next configuration step.


2. Device Parameter Configuration

To help users quickly understand the device, we used default parameters for transparent data transmission testing. The module's default parameters are shown in the table below:

| Item | Default Parameters |
|--------------------------------------|---|
| IP Address | 192.168.3.200 |
| Subnet Mask | 255.255.255.0 |
| Gateway | 192.168.3.1 |
| Channel 1 Protocol Type | TCP Server |
| Channel 1 Local Port | 8001 |
| Serial Port Communication Parameters | 9600, 8-bit data, no parity, 1 stop bit |


Ensure that the computer IP address and the serial device server IP address are on the same network segment and do not conflict. The verification method is shown in the figure below:

Note: Before opening the software, disable the computer's wireless network. This is because the IP automatically identified by the configuration and testing software prioritizes the wireless network IP address over the local connection IP address.

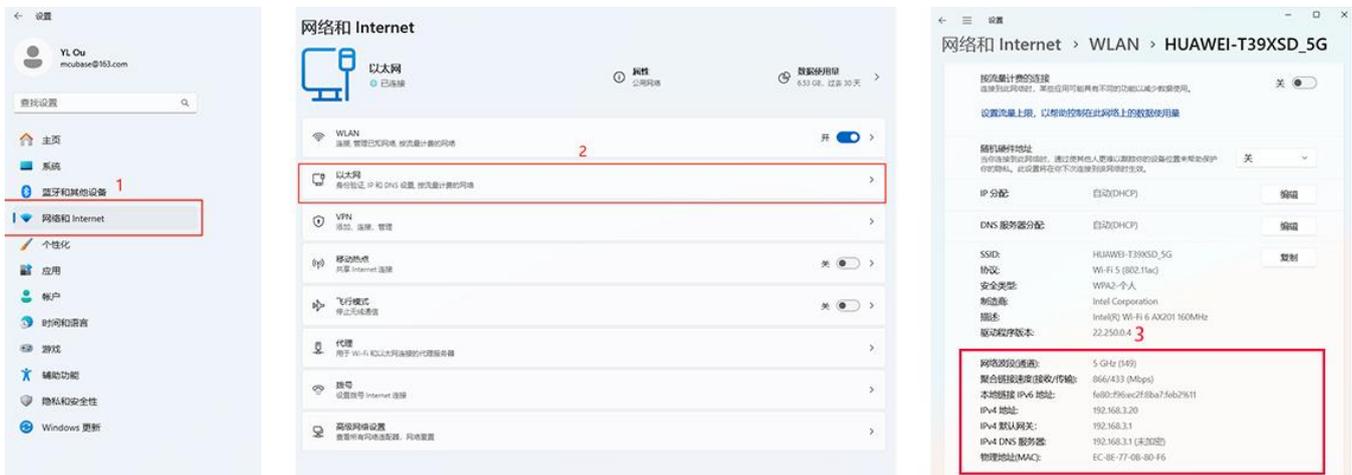

3. Disable your computer's firewall

If communication fails, try disabling your computer's firewall, router's firewall, and antivirus software before trying again.

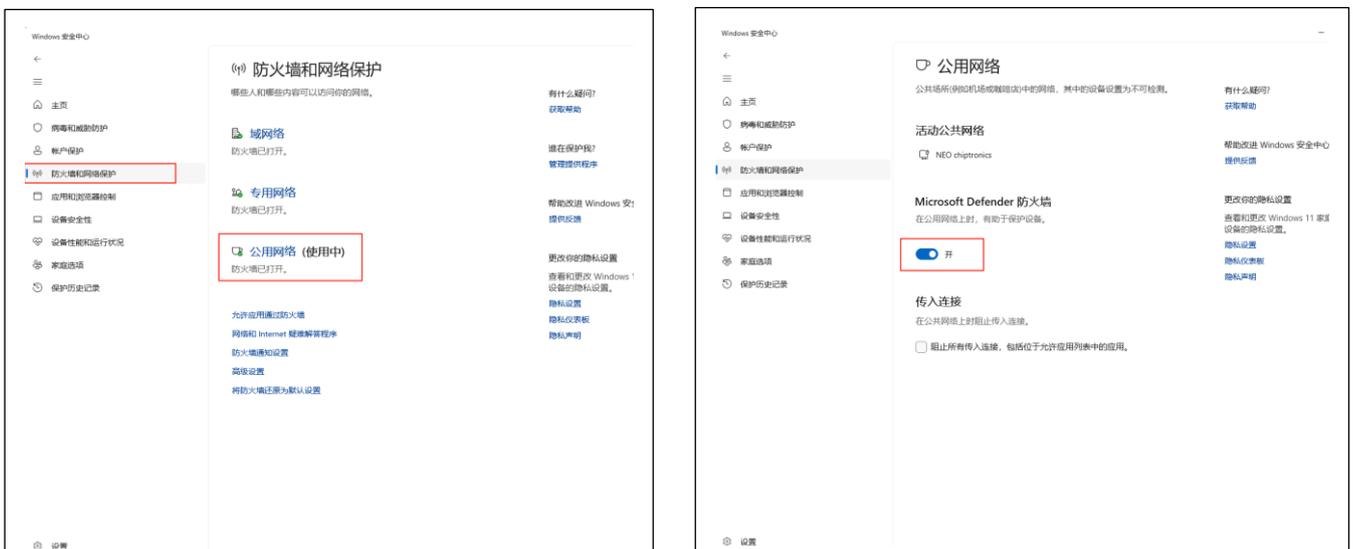

4. Open the "Serial Port Debug Assistant"

Select the correct serial port number and configure the correct serial port parameters. Then open the serial port, as shown below:



5. Open the Network Assistant.

Select "TCP Client" mode, configure the remote IP address to "192.168.3.200" and the remote host port to "8001," and connect to the device, as shown below:



6. Sending and receiving data test

Click the "Send" button on "Network Debugging Assistant" and "Serial Debugging Assistant" respectively to realize the transparent transmission of network and serial port data, as shown in the following figure:

